


Problem Solving Guide / Glass & Dish Washers

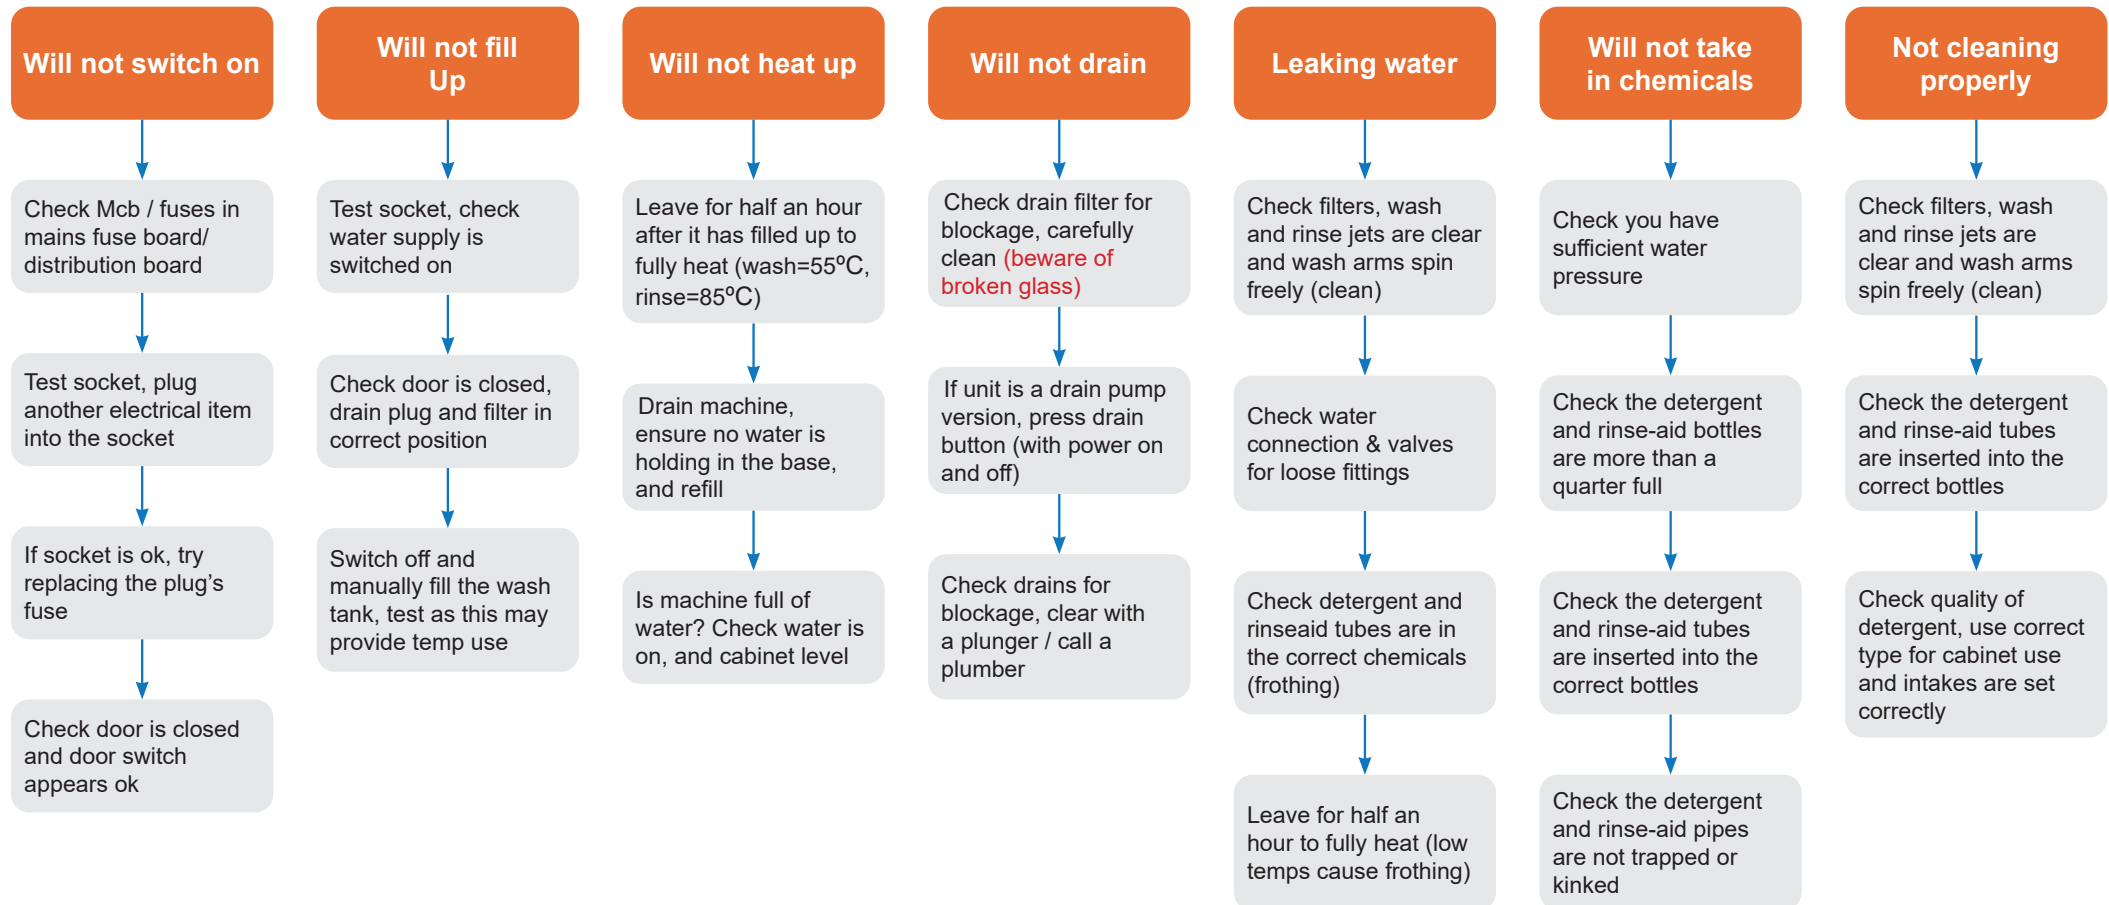

Note! If a report of a unit is giving electric shocks, the equipment is unsafe and should be disconnected and not used until a technician has repaired the fault.